## **Cleaning Kit**



- Replace the green roller everytime a new set of ribbon is used.
- Use the cleaning card that is included in the new ribbon

### **Cleaning Process Guides as below:**

- Go to "Control Panel" > Printers and Faxes/Printers and Devices > Select Hiti CS-200e Printer > right click > select "Printing Preferences".
  - Under Tools > Select "Cleaning Tool" for general printer cleaning process by using cleaning card (blue).




# Cleaning Process Step 1:

Follow instruction given alternatives, you may pull up the ribbon cassette and keep the door open instead of take off the ribbon cassette.



### **Cleaning Process Step 2:**

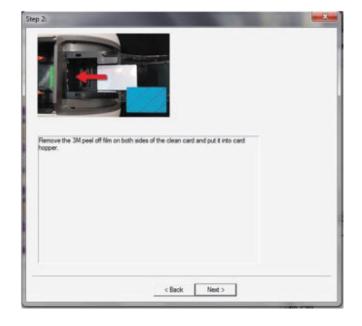

# Cleaning Process Step 3:



\* Click "Next" to start cleaning, cleaning process takes about 10 sec duration.

#### Remarks:

- Do not re-use the cleaning card.