

Common Error Message from Printer LCD Screen :

1. Card Jam (0506 Error Code) : Card Jam in the middle of Flipper

**Remedy Action**

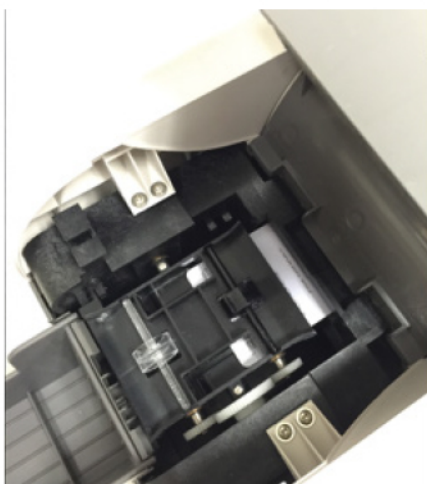
Step 1 : Click "OK" and Open the flipper



Step 2 : Open the Flipper cover and Click "OK"



Step 3 : Check if there is a card jam at flipper and click "OK" to remove it.

**Caution :**

Please do not remove the card manually as it will be ejected **AUTOMATICALLY**.